

## iCtp PW INFUSE Service tool update

Valid for following product(s):

Product code	Description	Implemented from Serial Number
10069600	PW3600	10069600-0033
10102450	PWINFUSE	10102450-0087
10107200	PWINFUSE XL	10107200-0005
10103500	PWINFUSE KIT	10103500-0010

### Issue(s)/symptom(s):

There was a bug in the GJ service tool which occasionally triggered the 150C error during the un-cap move sequence.


### Improvement(s):

A new version of the Service Tool is now available.

The error has been corrected with a build in delay, so the Pump-Cap-Assy will be unlocked before it moves the carriage from home position and finally power off.


### USER options:

1. Uncap and Cap Print-head for maintenance or service.
2. Printing a nozzle test.
3. PK/Y Cleaning programs in 3 categories for maintenance.
4. Pump-Cap-Assy cleaning program for maintenance.

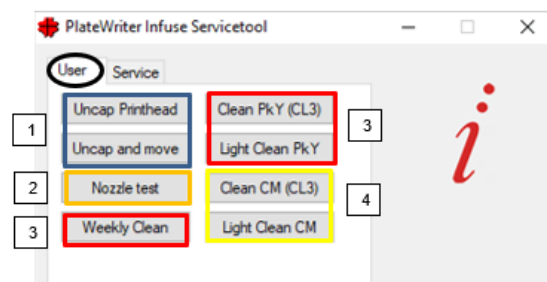

### SERVICE options:

5. Uncap for maintenance or service
6. Adjustment of the printer feed
7. Head height and tilt (PF) adjustment
8. Print head slant (CR)/bias adjustment
9. Front registration system adjustment
10. Jet QA test job

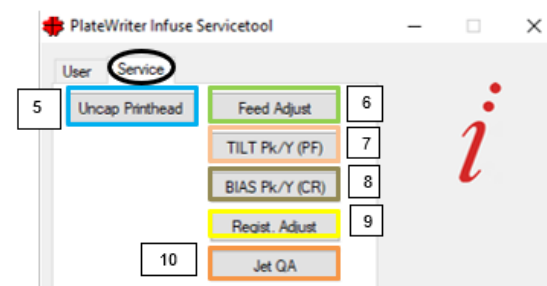

For further information please see the relevant section in the Service Manual "Printer adjustment and set up."

### Update procedure:

Uploading the new version of the Service Tool.

Please contact the [callcenter@glunz-jensen.com](mailto:callcenter@glunz-jensen.com) and refer to CS-Note: GJ-20240111.